

# GreCon

 
## Brief Instructions: Functional Test Detector group and extinguishment group



### Note

Authorisation level 2 is the minimum level required for carrying out a functional test.


- 1 Press the button “Settings”.




- 2 In the menu “Switching off / Function test”, select the menu option that is to be tested:  
“Test detector group”  
“Test extinguishment group”



- 3 Select the sub-zone to be tested.

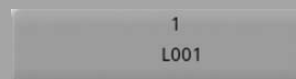

- 4 In the display, click the “Start” button.

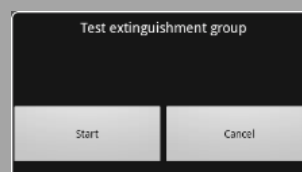

- 5 The test is ended automatically.  
A symbol on the button indicates the progress of the test.

# GreCon

## Brief Instructions: Functional Test Components



### Note

Authorisation level 2 is the minimum level required for carrying out a functional test.

- 1 Press the button “Settings”.



- 2 In the menu “Switching off / Function test”, select the menu option that is to be tested: “Components Test”



- 3 Select the component to be tested with a check-mark.
- 4 The component is tested till the check mark is removed.